

Method Statement

1. Demolition Phase:

Dismantle the 3 existing damaged sections of existing sea wall which have been subject to failures. Salvage reusable materials, if possible.

2. Foundation Phase:

Install guttering around concrete to avoid water damage/concrete runoff.

Inspect and prepare the existing concrete haunch for concrete repairs.

Repair the existing haunch and extend the concrete haunch to also include the areas to be repaired.

3. Existing Sea Wall Repair Phase:

Select and position stones.

Use appropriate mortar mix to ensure structural integrity.

Pay attention to mortar curing and weather conditions.

Repoint other areas of the wall and infill cavities with concrete where identified.

- **Detail sequence of works to be developed my contractor at time of works.**